

Instructions

94-02 Dodge Intake


BOODGE

1



Remove the intake tubing from the turbo and factory air box using a flat head screwdriver or a 5/16 nut driver.

2

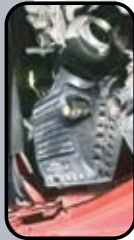

Unsnap the 4 clips on the air box and remove the upper portion of the air box. Remove the factory filter. Unscrew the 3 rubber grommets and remove the remaining piece of the air box.

3

Remove the 3 grommets from the factory air box. It may help to use a flat head screwdriver and some rubber safe lubricant. Remove the filter gauge along with the grommet for it in the same manner as you removed the grommets in Step 2. You will need the grommets and filter gauge for your Monster Air Intake.



4

Re-install the 3 mounting grommets in the bottom of the Monster Air Intake. Re-install the factory filter gauge in the hole provided in the intake tube of the Monster Air Intake.



6

Re-attach the intake tubing to the turbo and tighten the band clamp. Slide the other end of the tubing onto the Monster Air Intake and tighten the band clamp on it as well.



Notes:

We recommend that you store any stock pieces that have been removed. If for any reason you decide to reinstall the stock intake you will need all of these pieces.

Air Filter Replacement Sensor and grommets would need to be removed from Monster Air Intake and attached back to the stock intake.

5

Mount the Monster Air Intake in the vehicle by placing the 3 grommets over the threaded studs. Tighten the grommets by turning them clockwise by hand.

www.QuadZillaPower.com